
OPA-8380, OPA-8381 • openGear Card Adapters User Manual

- Ross Part Number: **8380DR-004**
- Document Issue: **03**
- Release Date: May 29, 2009. Printed in Canada.

The information contained in this User Manual is subject to change without notice or obligation.

Copyright



© 2009 Ross Video Limited. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of openGear. Reproduction or reverse engineering of copyrighted software is prohibited.

Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as a commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Trademarks

-  is a registered trademark of Ross Video Limited.
-  is a registered trademark of Ross Video Limited.
- Ross, ROSS, ROSS®, and MLE are registered trademarks of Ross Video Limited.
- All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

Important Regulatory and Safety Notices

Before using this product and any associated equipment, refer to the “Important Safety Instructions” listed below so as to avoid personnel injury and to prevent product damage.

Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these Specific requirements.

Symbol Meanings



This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.



Warning

The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.



Caution

The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



Notice

The symbol with the word “**Notice**” within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation which could place the equipment in a non-compliant operating state.



**ESD
Susceptibility**

This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

Important Safety Instructions



Caution

This product is intended to be a component product of the openGear 8000 series frame. Refer to the openGear 8000 series frame User Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as it’s component products.



Warning

Certain parts of this equipment namely the power supply area still present a safety hazard, with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cords from the chassis' rear appliance connectors before servicing this area.



Warning

Service barriers within this product are intended to protect the operator and service personnel from hazardous voltages. For continued safety, replace all barriers after any servicing.

This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained within the product’s power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair.

To reduce the risk of fire, replacement fuses must be the same type and rating.

Only use attachments/accessories specified by the manufacturer.

EMC Notices

US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case users will be required to correct the interference at their own expense.



Notice

Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.

CANADA

This Class "A" digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de classe "A" est conforme à la norme NMB-003 du Canada.

EUROPE

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

INTERNATIONAL

This equipment has been tested to **CISPR 22:1997** along with amendments **A1:2000** and **A2:2002** and found to comply with the limits for a Class A Digital device.



Notice

This is a Class A product. In domestic environments this product may cause radio interference in which case the user may have to take adequate measures.

Maintenance/User Serviceable Parts


Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the "Contact Us" section on the last page of this manual. All RossGear products are covered by a generous 5-year warranty and will be repaired without charge for materials or labor within this period. See the "Warranty and Repair Policy" section in this manual for details.

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.

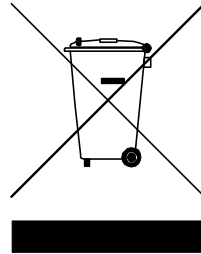

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

openGear Contents

Introduction	1-1
In This Chapter	1-1
A Word of Thanks	1-1
Overview	1-1
Documentation Terms	1-2
Installing an openGear Card Adapter	2-1
In This Chapter	2-1
Static Discharge	2-1
OPA-8380-4	2-2
Impact on Card Specifications	2-2
DIP Switches	2-2
OPA-8380-9	2-3
Impact on Card Specifications	2-3
DIP Switches	2-3
OPA-8380A	2-4
Impact on Card Specifications	2-4
Jumper Setting	2-4
OPA-8381	2-5
Impact on Card Specifications	2-5
Installing an openGear Card Adapter	2-7
Required Materials	2-7
Installing an openGear Card Adapter	2-7
Removing the openGear Card Adapter	2-10
Cable Connections	2-13
BNC Connections	2-13
Audio Connections for the OPA-8381	2-14
Service Information	3-1
In This Chapter	3-1
Troubleshooting Checklist	3-1
Warranty and Repair Policy	3-2
Ordering Information	4-1
openGear Card Adapters and Related Products	4-1

Introduction

In This Chapter

This chapter contains the following sections:

- A Word of Thanks
- Overview
- Documentation Terms

A Word of Thanks

Congratulations on choosing the openGear Card Adapters **OPA-8380-4**, **OPA-8380-9**, **OPA-8380A** or the **OPA-8381**. The openGear Card Adapters are part of a full line of Digital Products within the openGear Terminal Equipment family of products, backed by Ross Video's experience in engineering and design expertise since 1974.

You will be pleased at how easily your new openGear Card Adapters fits into your overall working environment. Equally pleasing is the product quality, reliability and functionality. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your openGear Card Adapters, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

Overview

The openGear Card Adapters allows for the use of select RossGear cards to be fitted into the openGear platform. The openGear Card Adapters allow the platform to house cost effective Analog, SD, and AES solutions for today's needs while future proofing the platform investment for tomorrow's needs.

Refer to the document **Qualified RossGear Cards for the openGear Card Adapter** (8380DR-005) for a complete list of qualified RossGear cards for your adapter.

Documentation Terms

The following terms are used throughout this guide:

- “**openGear Card Adapters**” refers to the OPA-8380-4, OPA-8380-9, OPA-8380A and OPA-8381 unless otherwise noted.
- “**Frame**” refers to the DFR-8300 series frame that houses the openGear Card Adapters.
- All references to the DFR-8300 series frames also includes all versions of the 10-slot (DFR-8310 series) and the 20-slot (DFR-8320 series) frames and any available options unless otherwise noted.
- “**Operator**” and “**User**” refer to the person who uses the openGear Card Adapters.
- “**Board**”, and “**Card**” refer to the RossGear card itself, including all components and switches.
- “**System**” and “**Video system**” refer to the mix of interconnected production and terminal equipment in which the RossGear card operates.

Installing an openGear Card Adapter

In This Chapter

This chapter contains the following sections:

- Static Discharge
- OPA-8380-4
- OPA-8380-9
- OPA-8380A
- OPA-8381
- Installing an openGear Card Adapter
- Removing an openGear Card Adapter
- Cable Connections

Static Discharge

Whenever handling the openGear Card Adapters and other related equipment, observe all static discharge precautions as described in the following note:



ESD
Susceptibility

Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.

OPA-8380-4

Impact on Card Specifications

If you are installing an **OPA-8380-4** openGear Card Adapter, remember the following specification change:



Caution

When you connect the **OPA-8380-4** openGear Card Adapter to a qualified RossGear card, the Power Consumption of the RossGear card is doubled due to power regulation. For example, if your RossGear card requires 3 Watts of power, adding the **OPA-8380-4** increases the Power Consumption to 6 Watts.

DIP Switches

Before installing the **OPA-8380-4** openGear Card Adapter, verify that the DIP switches are set as follows:

- **S2 REF SEL** — Ensure this DIP Switch is set to the **REF-1** position.

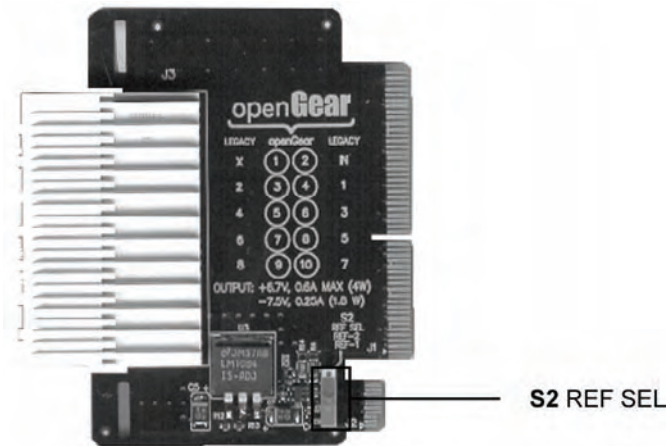


Figure 1. OPA-8380-4 openGear Card Adapter — Position of DIP Switch

OPA-8380-9

Impact on Card Specifications

If you are installing an **OPA-8380-9** openGear Card Adapter, remember the following specification changes:



Caution

When you connect the **OPA-8380-9** openGear Card Adapter to one of the qualified RossGear cards, the Power Consumption of the RossGear card is increased by 1.25 times due to power regulation. For example, if your RossGear card requires 3 Watts of power, adding the **OPA-8380-9** increases the Power Consumption to 3.75 Watts.

- **Return Loss** — When using the openGear Card Adapter the Return Loss number, as stated in your RossGear card User Manual, is reduced by 3dB. For example, if the user manual states -18dB, then the Return Loss with the openGear Card Adapter will be -15dB.
- **Power Draw** — The power draw of a module plus the openGear Card Adapter will be 1.25 times the positive power draw value as stated in your RossGear card User Manual.
- **Com-Link** — If using a Ross Video product with a Com-Link feature, do not set to AUX B. This setting may interfere with the Frame Reference.
- **SNR Measurements for Analog Signals** — When using analog signals, add 1dB for 5MHz BW measurements. For example, when using an analog composite output with an SNR measurement of -59dB, adding the openGear Card Adapter changes that measurement to -58dB.

DIP Switches

Before installing the **OPA-8380-9** openGear Card Adapter, verify that **S2** is set as required:

- **S2 REF SEL** — This switch can be used to switch between Frame Reference 1 and Frame Reference 2.

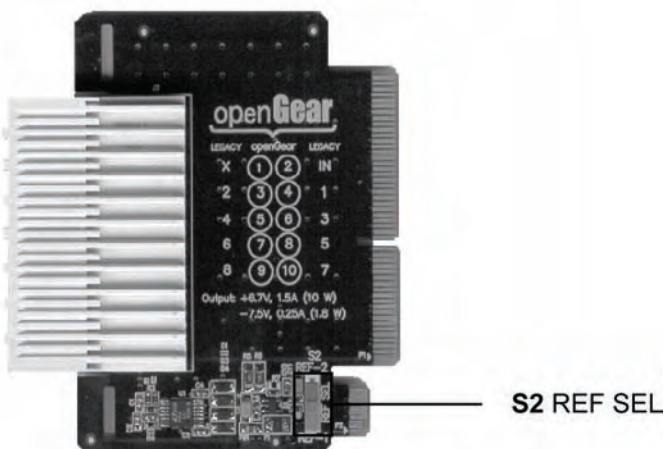


Figure 2. OPA-8380-9 openGear Card Adapter — Position of DIP Switch

OPA-8380A

Impact on Card Specifications

If you are installing an **OPA-8380A** openGear Card Adapter, remember the following specification changes:



Caution

When you connect the **OPA-8380A** openGear Card Adapter to one of the qualified RossGear cards, the Power Consumption of the RossGear card is increased by 1.25 times due to power regulation. For example, if your RossGear card requires 3 Watts of power, adding the **OPA-8380A** increases the Power Consumption to 3.75 Watts.

- **Return Loss** — When using the openGear Card Adapter the Return Loss number, as stated in your RossGear card User Manual, is reduced by 3dB. For example, if the user manual states -18dB, then the Return Loss with the openGear Card Adapter will be -15dB.
- **Power Draw** — The power draw of a module plus the openGear Card Adapter will be 1.25 times the positive power draw value as stated in your RossGear card User Manual.
- **Com-Link** — If using a Ross Video product with a Com-Link feature, do not set to AUX B. This setting may interfere with the Frame Reference.
- **SNR Measurements for Analog Signals** — When using analog signals, add 1dB for 5MHz BW measurements. For example, when using an analog composite output with an SNR measurement of -59dB, adding the openGear Card Adapter will change that measurement to -58dB.

Jumper Setting

Before installing the **OPA-8380A**, verify that **J1** is set as required:

- **J1 REF SEL** — This jumper is used to switch between Frame Reference 1 and Frame Reference 2.

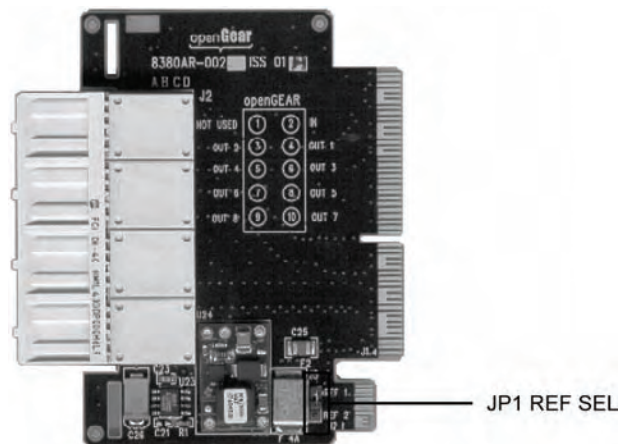


Figure 3. OPA-8380A— Location of JP1

OPA-8381

The OPA-8381 Card Adapter was designed to enable specific RossGear cards with audio inputs to be installed in the DFR-8300 series frames. For a list of the RossGear cards qualified for the OPA-8381, refer to the document “**Qualified RossGear Cards for the openGear Card Adapters**” or contact your openGear sales representative.

Impact on Card Specifications

If you are installing an **OPA-8381** openGear Card Adapter, remember the following specification changes:



When you connect the **OPA-8381** openGear Card Adapter to one of the qualified RossGear cards, the Power Consumption of the RossGear card is increased by 0.4W due to power regulation. For example, if your RossGear card requires 2.6W of power, adding the **OPA-8381** increases the Power Consumption to 3W.

Jumper Settings

Before installing the **OPA-8381**, verify that the jumpers are set as required according to the following sections. Refer to **Figure 4** for jumper locations and to **Figure 5** for jumper positions.

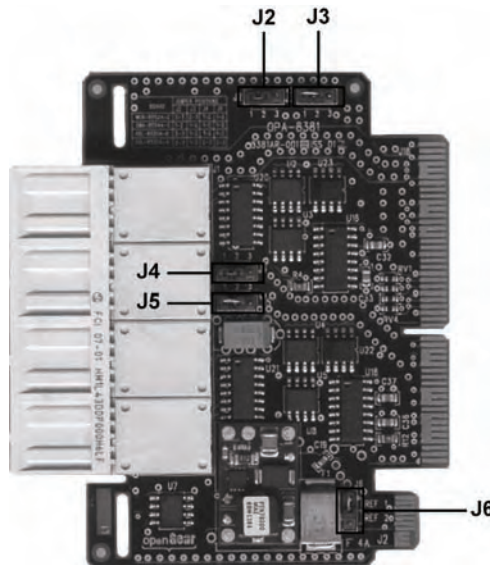


Figure 4. OPA-8381 — Jumper Locations

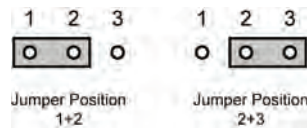


Figure 5. OPA-8381 — Jumper Positions

Card Selection

J2, **J3**, **J4** and **J5** are configured in conjunction to select the RossGear card installed with the OPA-8381. Set the jumpers according to **Table 1** and **Figure 5**.

Table 1. OPA-8381 — Jumper Positions for Card Selection

RossGear Card	Jumper Position			
	J2	J3	J4	J5
MUX-8552A-C	2+3	2+3	1+2	1+2
DMX-8554A-C	1+2	1+2	1+2	1+2
ADL-8520A-B	2+3	1+2	1+2	1+2
ADL-8520A-A	2+3	1+2	2+3	2+3

Reference Selection

Use **J6** to switch between Frame Reference 1 and Frame Reference 2.

Installing an openGear Card Adapter

This section outlines how to install the openGear Card Adapter onto a qualified RossGear card. Installing the openGear Adapter Retaining Clip (8310FR-421) secures the RossGear card to the openGear Card Adapter, enabling you to easily insert and extract the cards from the openGear frame. The procedure is identical for each qualified RossGear card and openGear Card Adapter, except where noted within the procedures.



Caution

You cannot install an openGear Card Adapter into slot 10 of a DFR-8310 frame. Attempting to insert an openGear Card Adapter into slot 10 may damage the RossGear card, the FINC card, or both.

Required Materials

To perform this installation, you require the following components and equipment:

- a qualified RossGear card
- an openGear Card Adapter
- an openGear Adapter Retaining Clip (**8310FR-421**)

If any required materials are missing, contact your sales representative or Ross Video directly.

Installing an openGear Card Adapter

Use the following procedure to install an openGear Card Adapter to a qualified RossGear card:

1. Ensure your RossGear card is one of the qualified model numbers for the openGear Card Adapter. The model number is silk-screened, or applied as a label, onto the face of your RossGear card and onto the card ejector (for current issue RossGear cards).
2. Place the cards on a clean and static-free surface, ensuring that:
 - the RossGear card is on your right and the openGear Card Adapter is on your left.
 - the cards are component-side down. The Ross and openGear logos will be face down on the surface. Refer to **Figure 6** for details.

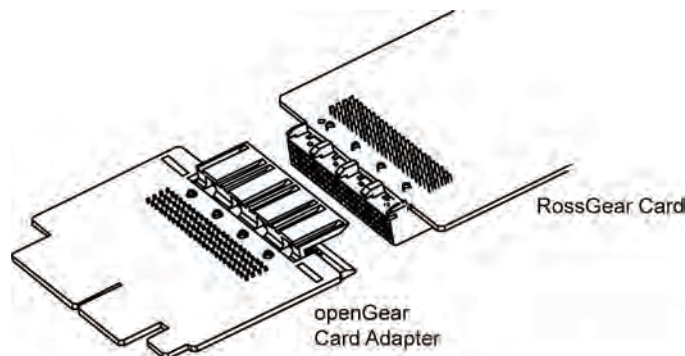


Figure 6. Positioning the Cards

3. Grip the openGear Adapter Retaining Clip, with the hooks facing down, and position it between the connector and the card-edge of the RossGear Card. Refer to **Figures 7 and 8** for details.

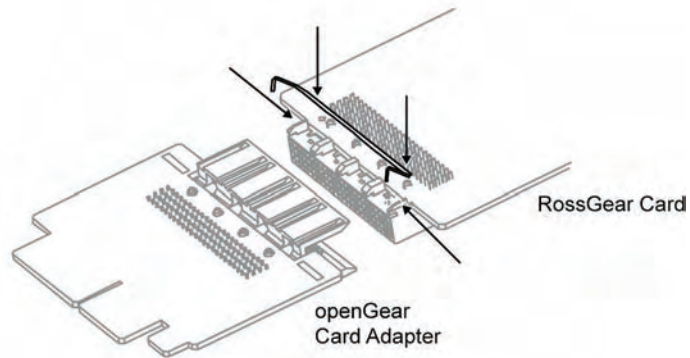


Figure 7. Positioning the openGear Adapter Retaining Clip — Top View

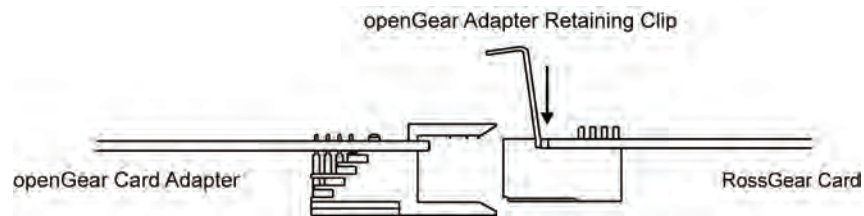


Figure 8. Positioning the openGear Adapter Retaining Clip — Side View

4. Ensure the openGear Adapter Retaining Clip is upright and perpendicular to the RossGear card. Refer to **Figure 8** or details.
5. Mate the connector of the RossGear card to the connector on the openGear Card Adapter. The connector of the openGear Card Adapter fits over the openGear Adapter Retaining Clip. Refer to **Figure 8** for details.

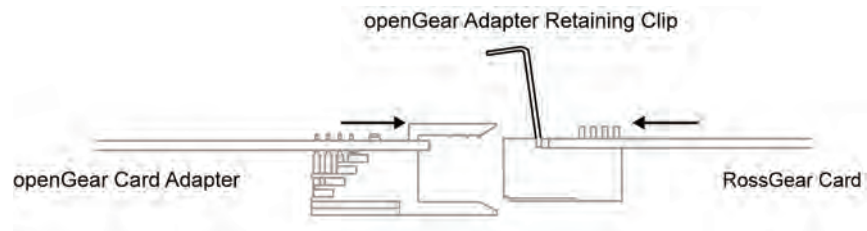


Figure 8. Mating the RossGear Card with the openGear Card Adapter

Note

Ensure the openGear Card Adapter mates securely to the RossGear card.

6. Using your thumb and index finger, apply downward pressure to insert the clip arms into the slots of the openGear Card Adapter. Refer to **Figures 9** and **10** for details.

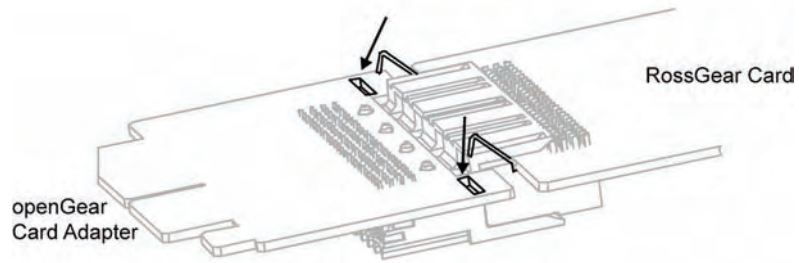


Figure 9. Inserting the openGear Adapter Retaining Clip – Side View

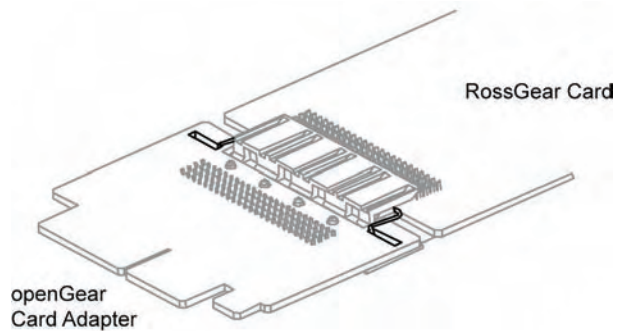


Figure 10. Position of the Inserted openGear Adapter Retaining Clip – Top View

7. Verify that the openGear Adapter Retaining Clip is secure as follows:
 - flip the cards over so that the silkscreen logos face you. The openGear Card Adapter is on the left.
 - ensure the clip arms are locked into position in the slots on the openGear Card Adapter card-edge. The ends of the clip arms will be visible and secure in the slots.

Note

If the openGear Adapter Retaining Clip is not secure, ensure the slots or the clip sides were not bent by removing the clip according to the instructions in the section “**Removing the openGear Card Adapter**” in this manual. Then gently correct the misaligned clip components and repeat the installation procedure.

This completes the procedure to install openGear Card Adapter to a qualified RossGear card.

Removing the openGear Card Adapter

Use the following procedure to remove an openGear Card Adapter:

1. Place the attached cards on a clean and static-free surface, ensuring the RossGear card is on your right and the openGear Card Adapter is on your left.
2. Flip the cards over so that the silkscreen logos face the surface. The openGear Card Adapter will still be on your left. Refer to **Figure 11** for orientation.

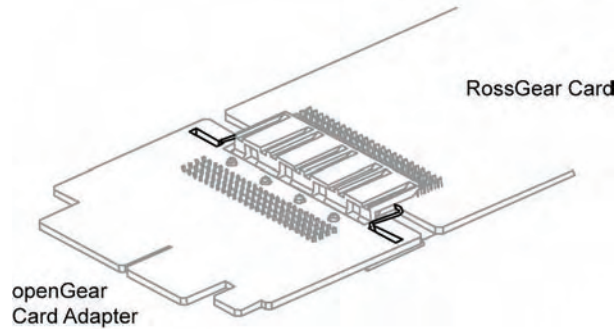


Figure 11. openGear Card Adapter and RossGear Card Orientation

3. Hold the openGear Card Adapter steady, and pinch the openGear Adapter Retaining Clip using the thumb and index finger as shown by the arrows in **Figure 12**.

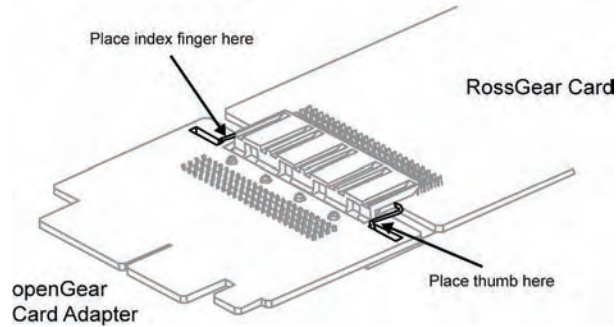


Figure 12. Positioning the openGear Card Adapter and Retaining Clip — Top View

4. Gently pinch and tilt the clip arms away from the openGear Card Adapter until they are perpendicular to the RossGear card. Refer to **Figures 13** and **14** for details.

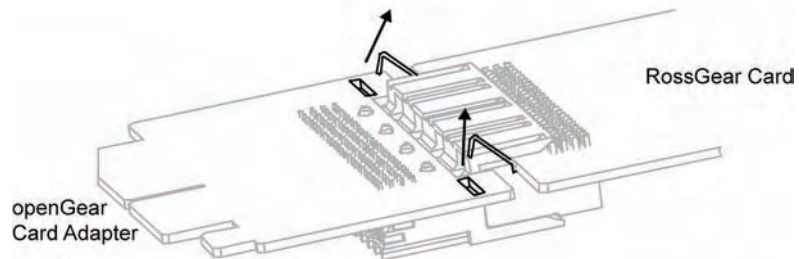


Figure 13. Pulling Upwards on the openGear Adapter Retaining Clip — Top View

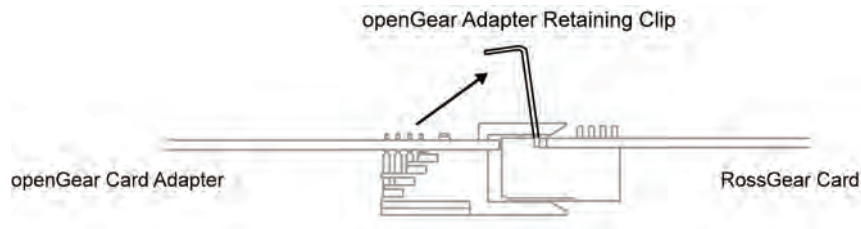


Figure 14. Positioning the openGear Adapter Retaining Clip – Side View

5. Grasp the RossGear card in your right hand, and the openGear Card Adapter in your left hand.
6. Gently pull the two cards apart, taking care not to twist or pry the openGear Card Adapter connector as you disengage the pins. Refer to **Figure 15** for details.

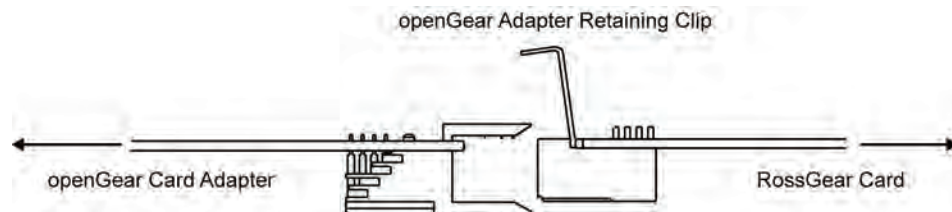


Figure 15. Disengaging the Cards

7. Remove the openGear Adapter Retaining Clip from its position between the connector and the card-edge of the RossGear Card and set aside. Refer to **Figure 16** for details.

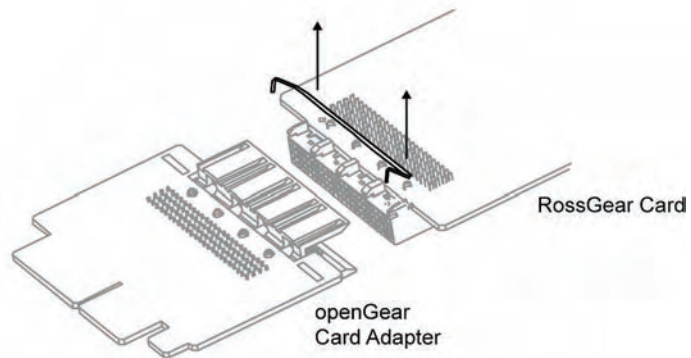


Figure 16. Disengaging the openGear Adapter Retaining Clip

This completes the procedure to remove an openGear Card Adapter.

Cable Connections

This section provides information for connecting cables to the installed Rear Modules on the DFR-8300 series frame backplane.

BNC Connections

Connect the input and output cables according to the table located on the front of the openGear Card Adapter and the information in this section. Refer to **Figure 17** and **Table 2** for information on the pin to pin conversion when installing a Qualified RossGear Card into the DFR-8300 series frame.

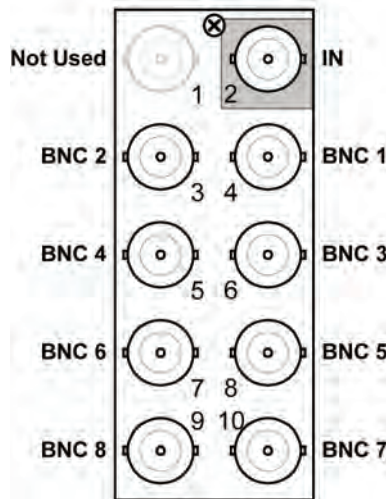


Figure 17. Pin to Pin Conversion for Qualified Cards into the DFR-8300 Series Frames

Refer to **Table 2**, and the BNC Label that accompanied your RossGear card, to connect cables to a qualified RossGear Card installed in an openGear rear module. For example, connect the required input cable to BNC 2 on the rear module.

Table 2. RossGear to openGear BNC Conversion

RossGear BNC Connection	openGear BNC Connection
IN	BNC 2
BNC 1	BNC 4
BNC 2	BNC 3
BNC 3	BNC 6
BNC 4	BNC 5
BNC 5	BNC 8
BNC 6	BNC 7
BNC 7	BNC 10
BNC 8	BNC 9

Audio Connections for the OPA-8381

Connect the input and output cables according to the silkscreen table on the back of the openGear Card Adapter and the information in this section. Refer to the following figures for information on the pin to pin conversion when installing an MUX-8552A-A, DMX-8554A-C, ADL-8520A-B, or an ADL-8520A-A into the DFR-8300 series frame using the OPA-8381 Card Adapter.

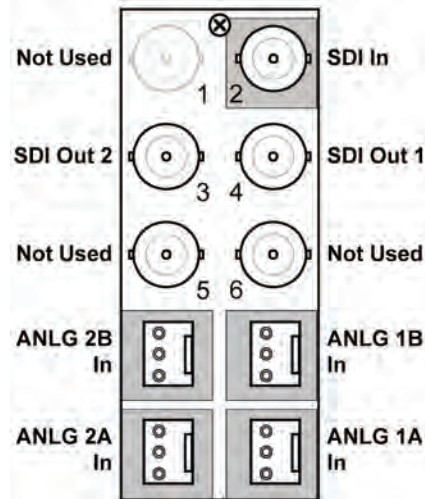


Figure 18. Cable Connections for the MUX-8552A-C

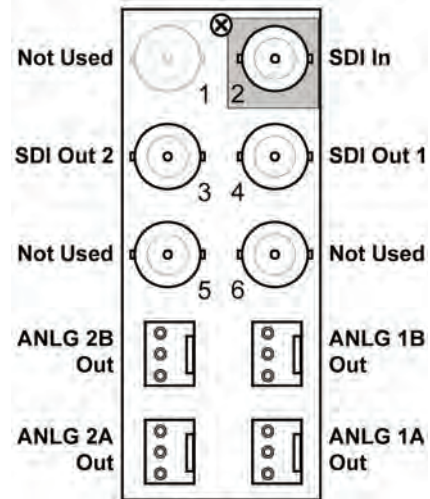


Figure 19. Cable Connections for the DMX-8554A-C

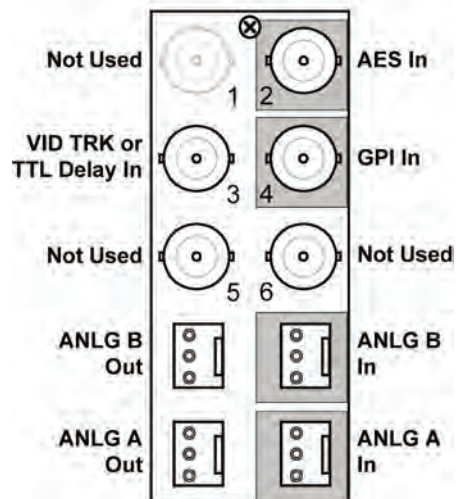


Figure 20. Cable Connections for the ADL-8520A-B

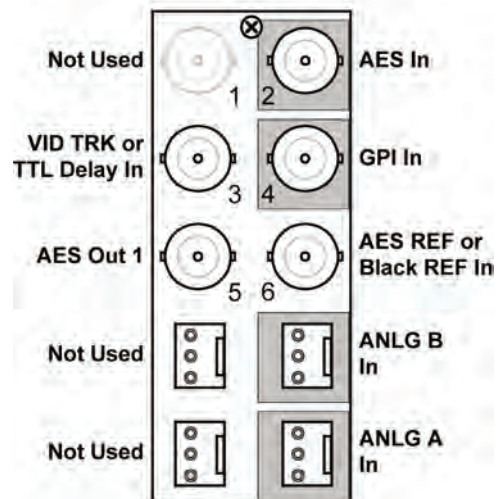


Figure 21. Cable Connections for the ADL-8520A-A

Service Information

In This Chapter

This chapter contains the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your qualified **RossGear** cards, the following basic troubleshooting checklist may help identify the source of the problem. If the card still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the openGear Technical Support department at the numbers listed under the “**Contact Us**” section at the end of this manual.

1. **Visual Review** – Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the module, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** – Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Reseat the Card in the Frame** – Eject the card and reinsert it in the frame.
4. **Check Control Settings** – Refer to the Installation and Operation sections of the card’s User Manual and verify all user-adjustable component settings.
5. **Input Signal Status** – Verify that source equipment is operating correctly and that a valid signal is being supplied.
6. **Output Signal Path** – Verify that destination equipment is operating correctly and receiving a valid signal.
7. **Module Exchange** – Exchanging a suspect module with a module that is known to be working correctly is an efficient method for localizing problems to individual modules.

Warranty and Repair Policy

The openGear Card Adapter is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your openGear Card Adapter proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this openGear Card Adapter has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This openGear Card Adapter User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ross Video policy dictates that all repairs to the openGear Card Adapters are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

In Case of Problems

Should any problem arise with your openGear Card Adapter, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your openGear Card Adapter. If required, a temporary replacement module will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

Ordering Information

openGear Card Adapters and Related Products

This chapter contains ordering information for the openGear Card Adapters and related products.

Standard Equipment

- **OPA-8380-4** openGear Card Adapter
- **OPA-8380-9** openGear Card Adapter
- **OPA-8380A** openGear Card Adapter
- **OPA-8381** openGear Card Adapter
- **8310FR-421** openGear Adapter Retaining Clip
- **8380DR-004** openGear Card Adapter User Manual

Optional Equipment

- **8380DR-004** additional openGear Card Adapter User Manual
- **8380DR-005** Qualified RossGear Cards for the openGear Card Adapter Document
- **RM-8300-B** Rear Panel that includes ten 10-BNC rear modules for installation into DFR-8310-C frames
- **DFR-8310-C** Digital Products Frame and Power Supply with Cooling Fans (2RU, holds 10 cards)
- **DFR-8320-CNS** Digital Products Frame with Power Supply, Cooling Fans, Network Controller Card, COMM I/O Module, and SNMP-8310 (2RU, holds up to 20 cards)

Your openGear Card Adapters are a part of the openGear family of products. Ross Video offers a full line of openGear terminal equipment including distribution, conversion, monitoring, synchronizers, encoders, decoders, AES, keyers, switches, as well as analog audio and video products.

Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

PHONE	General Business Office and Technical Support	613 • 652 • 4886
	After Hours Support	613 • 349 • 0006
	Fax	613 • 652 • 4425
E-MAIL	General Information	solutions@rossvideo.com
	Technical Support	techsupport@rossvideo.com
POSTAL SERVICE	Ross Video Limited	8 John Street, Iroquois, Ontario, Canada K0E 1K0
	Ross Video Incorporated	P.O. Box 880, Ogdensburg, New York, USA 13669-0880

Visit Us

Please visit us at our website for:

- Company information
- Related products and full product lines
- On-line catalog
- Trade show information
- News
- Testimonials

www.rossvideo.com
